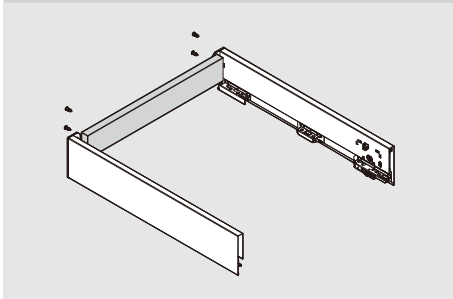 
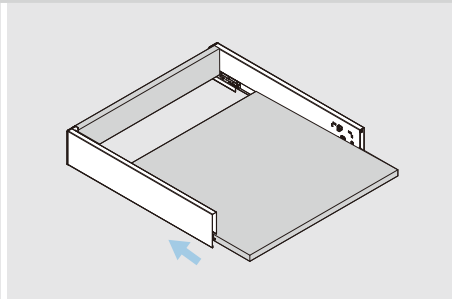 
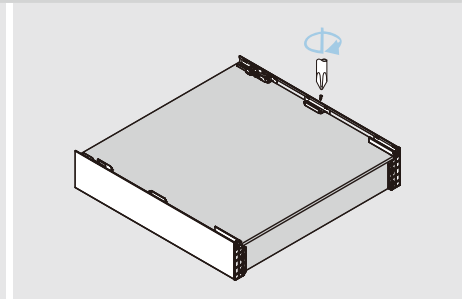 


ASSEMBLY AND ADJUSTMENT

Assembly and Adjustment(for MAGIC-STAR PLUS)



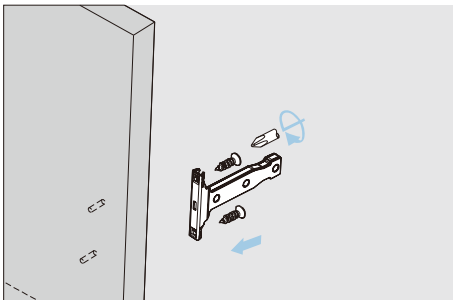 
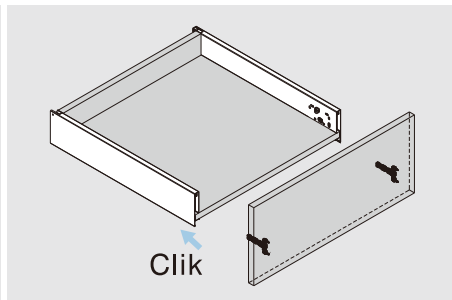 
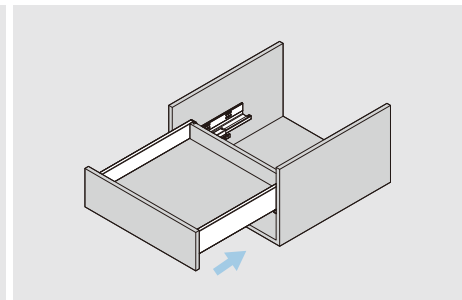 
Drawer Assembly

Back assembly

Bottom assembly

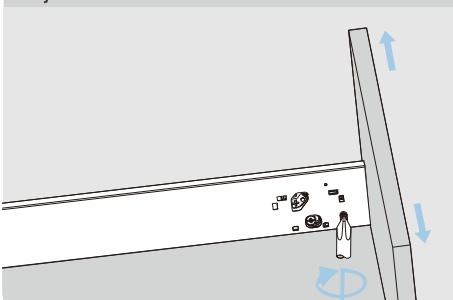 
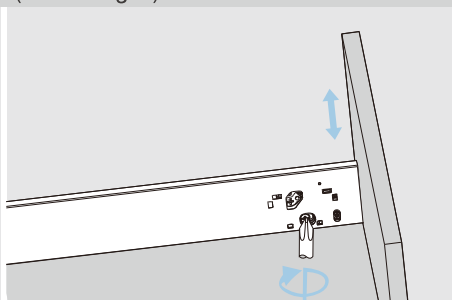 
 
Fix screws

Clik

Slide into the cabinet

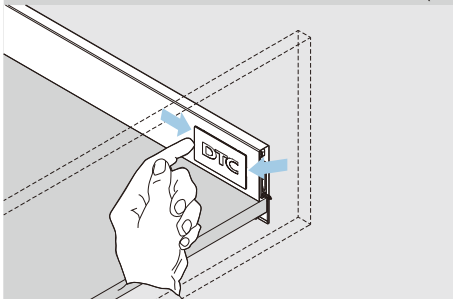 
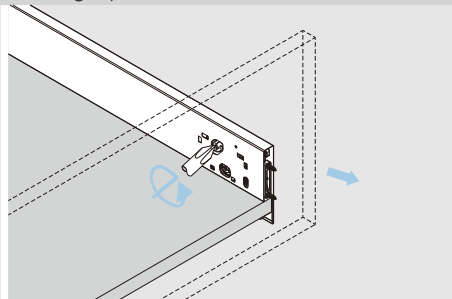 
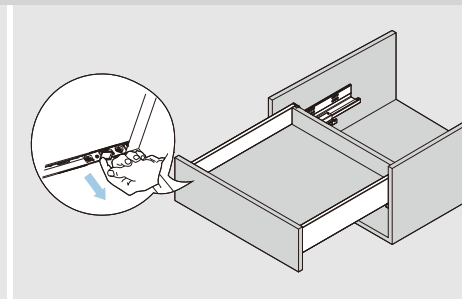 
Adjustments for Lower/Medium Drawer(M/K Height)

Left&right adjustment

Up&down adjustment

Removal for Lower/Medium Drawer(M/K Height)

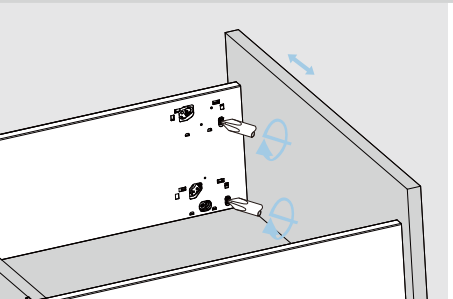 
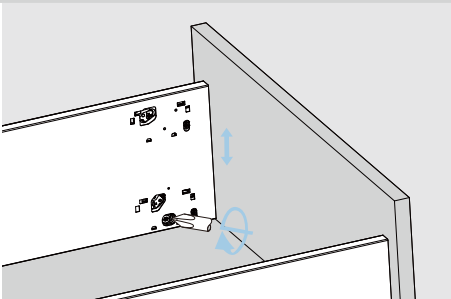 
 




Tip up the cover and pull out

Turn screw driver to release the drawer front

Press the locking device under drawer bottom and pull out the drawer

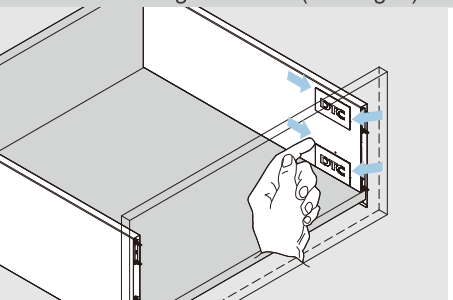 
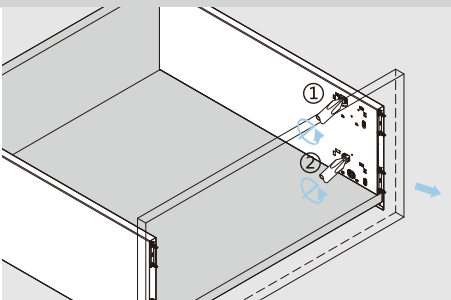 
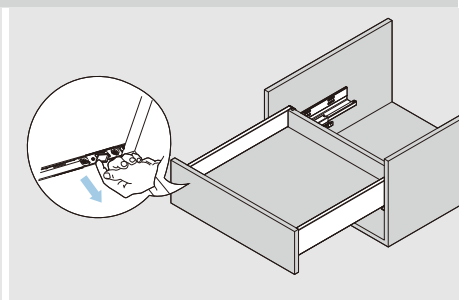 
Adjustments for High Drawer (C Height)

Left&right adjustment

Up&down adjustment

Removal of High Drawer (C Height)

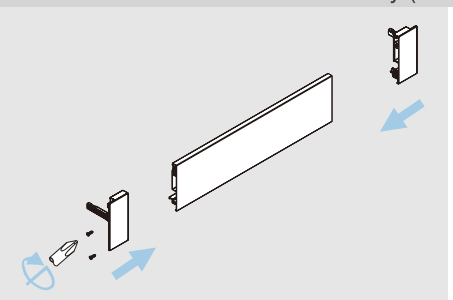 
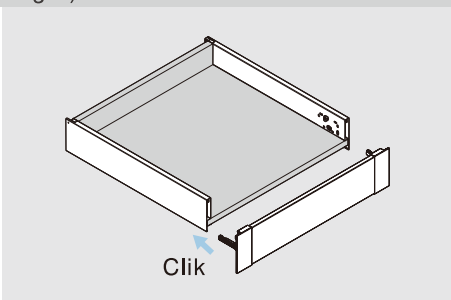 
 




Tip up the cover and pull out

Turn screw driver to release the drawer front

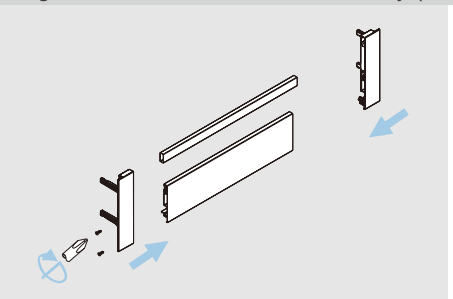 
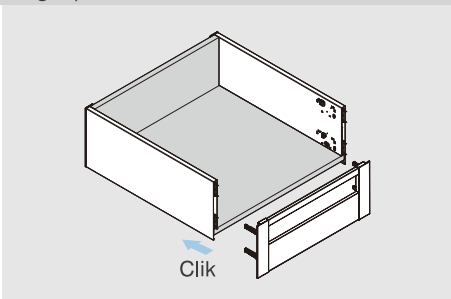 
 
Press the locking device under drawer bottom and pull out the drawer

Low Inner Drawer Front assembly (M Height)

Clik

High Inner Drawer Front assembly (C Height)

Clik